

Day 4-2

Assignment:



- Homework 03, Due Today
- Labs 04-07 is available now

Today's Topics:

- LED Matrix
- Range Finder
- Joysticks, Encoders
- Accelerometers, Gyros

03-3 Rotary Encoders - eQEP


Measuring Rotation

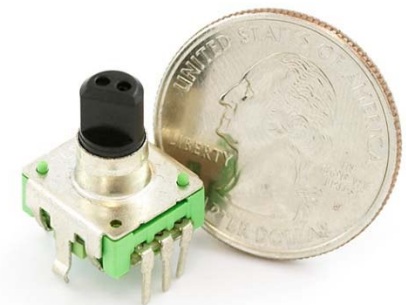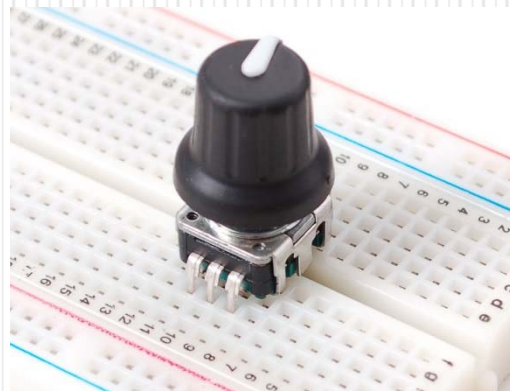

Rotary Encoders

- Rotary encoder measure rotation by using two switches that open and close 90° out of phase with each other
- They have two inputs, **A** and **B**

Figure 15-130. Optical Encoder Disk

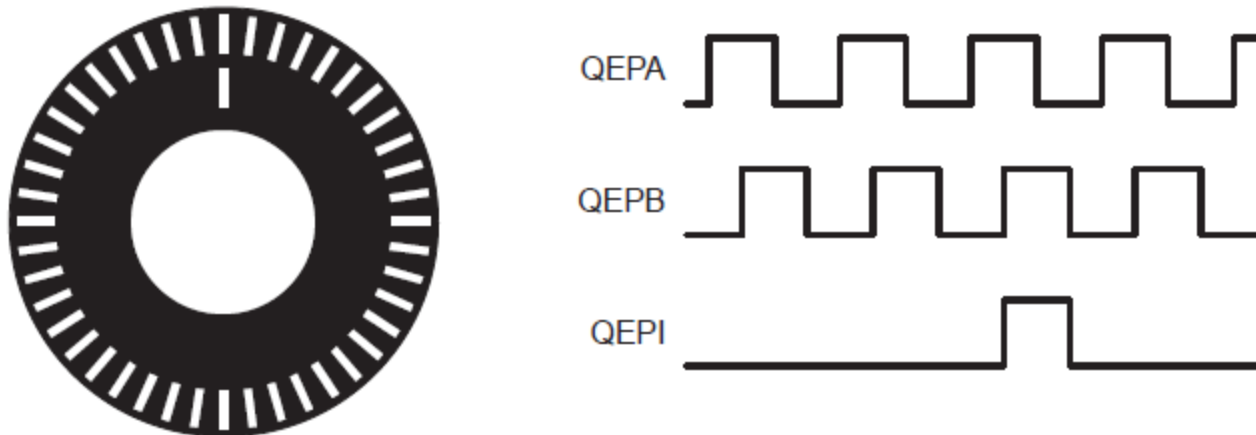

Reading the Encoder

- We could hook **A** and **B** to GPIO pins and read them ourselves
- The Bone has hardware for reading encoders called the Enhanced Quadrature Encoder Pulse (eQEP) Module
- See section 15.4 of the TRM

eQEP

- Let's use eQEP 2
- Derek Molloy's table show they appear on pins P8_11 and 12

Beaglebone Black P8 Header

Head_pin	\$PINS	ADDR/OFFSET	GPIO NO.	Name	Mode7	Mode6	Mode5	Mode4	Mode3	Mode2
P8_01				DGND						
P8_02				DGND						
P8_03	6	0x818/018	38	GPIO1_6	gpio1[6]					
P8_04	7	0x81c/01c	39	GPIO1_7	gpio1[7]					
P8_05	2	0x808/008	34	GPIO1_2	gpio1[2]					
P8_06	3	0x80c/00c	35	GPIO1_3	gpio1[3]					
P8_07	36	0x890/090	66	TIMER4	gpio2[2]					timer4
P8_08	37	0x894/094	67	TIMER7	gpio2[3]					timer7
P8_09	39	0x89c/09c	69	TIMER5	gpio2[5]					timer5
P8_10	38	0x898/098	68	TIMER6	gpio2[4]					timer6
P8_11	13	0x834/034	45	GPIO1_13	gpio1[13]			eQEP2B_in	mmc2_dat1	mmc1_dat5
P8_12	12	0x830/030	44	GPIO1_12	gpio1[12]			EQEP2A_IN	MMC2_DAT0	MMC1_DAT4
P8_13	9	0x824/024	23	EHRPWM2B	gpio0[23]			ehrpwm2B	mmc2_dat5	mmc1_dat1
P8_14	10	0x828/028	26	GPIO0_26	gpio0[26]			ehrpwm2B_trigzone_in	mmc2_dat6	mmc1_dat2
P8_15	15	0x83c/03c	47	GPIO1_15	gpio1[15]			eQEP2_strobe	mmc2_dat3	mmc1_dat7
P8_16	14	0x838/038	46	GPIO1_14	gpio1[14]			eQEP2_index	mmc2_dat2	mmc1_dat6
P8_17	11	0x82c/02c	27	GPIO0_27	gpio0[27]			ehrpwm0_sync0	mmc2_dat7	mmc1_dat3
P8_18	35	0x88c/08c	65	GPIO2_1	gpio2[1]	mcasp0_fsr			mmc2_clk	gpmc_wait1
P8_19	8	0x820/020	22	EHRPWM2A	gpio0[22]			ehrpwm2A	mmc2_dat4	mmc1_dat0
P8_20	33	0x884/084	63	GPIO1_31	gpio1[31]					mmc1_cmd
P8_21	32	0x880/080	62	GPIO1_30	gpio1[30]					mmc1_clk

Enable eQEP

```
bone$ ls /lib/firmware/ | grep -i qep
```

```
PyBBIO-eqep0-00A0.dtbo
```

```
PyBBIO-eqep1-00A0.dtbo
```

```
PyBBIO-eqep2-00A0.dtbo
```

```
PyBBIO-eqep2b-00A0.dtbo
```

```
bone$ export SLOTS=/sys/devices/bone_capemgr.*/slots
```

```
bone$ echo PyBBIO-eqep2b > $SLOTS
```

- **eQEP is now enabled**

Read eQEP

```
bone$ cd /sys/devices/ocp.*/48304000.epwmss
```

```
bone$ ls -F
```

```
48304100.ecap/  48304200.ehrpwm/  modalias  subsystem@  
48304180.eqep/  driver@           power/     uevent
```

```
bone$ cd 48304180.eqep/
```

```
bone$ ls -F
```

```
driver@  enabled  modalias  mode  period  
position  power/  subsystem@  uevent
```

```
bone$ cat position
```

```
-50
```

- Turn encoder

```
bone$ cat position
```

```
-36
```

Read from JavaScript (examples/eQEP)

```
#!/usr/bin/env node
// This uses the eQEP hardware to read a rotary encoder
// echo PyBBIO-eqep2b > $SLOTS

var b = require('bonescript'),
    fs = require('fs');

var eQEP0 = "/sys/devices/ocp.3/48300000.epwmss/48300180.eqep",
    eQEP1 = "/sys/devices/ocp.3/48302000.epwmss/48302180.eqep",
    eQEP2 = "/sys/devices/ocp.3/48304000.epwmss/48304180.eqep",
    eQEP = eQEP2;

var oldData,          // pervious data read
    period = 100;     // in ms
```



```
bone$ ls -F
driver@ enabled modalias mode period
position power/ subsystem@ uevent
```

Read from JavaScript (2)

```
    period = 100;    // in ms
// Set the eEQP period, convert to ns.
fs.writeFile(eQEP+'/period', period*1000000,
    function(err) {
        if (err) throw err;
        console.log('Period updated to ' +
                    period*1000000);
    })

// Enable
fs.writeFile(eQEP+'/enabled', 1,
    function(err) {
        if (err) throw err;
        console.log('Enabled');
    })
```

Read from JavaScript (3)

```
setInterval(readEncoder, period); // Check state every 100 ms
```

```
function readEncoder(x) {  
    fs.readFile(eQEP + '/position',  
        {encoding: 'utf8'},  
        printValue);  
}  
function printValue(err, data) {  
    if (err) throw err;  
    if (oldData !== data) {  
        console.log('position: %d, speed:',  
            data, oldData-data);  
        oldData = data;  
    }  
}
```